

## Overview of the VidyoRoom Remote Control

The VidyoRoom comes with a remote control allowing quick key shortcuts to frequent VidyoRoom activities. It also provides the input mode/keyboard for typing information.

**Not In Conference**

**CONNECT** — Start meeting from the homepage.

**ARROWS / OK** — Use the arrow keys to navigate on-screen. The option you navigate to will be highlighted in green when activated. Press the OK key on the remote to select the option on-screen.

**VOLUME / MUTE / SELFVIEW / ZOOM** — Not applicable  
Volume — Not applicable  
Mute — Not applicable  
Selfview — Cycles through Selfview modes  
Single Screen Mode — Shows preview  
Dual Screen Mode — Shows help screen on the first monitor and turns control to the camera while the preview is shown on the second monitor  
Zoom — Acts as a page up/page down for scrolling through search results on-screen  
Use these keys in conjunction with the input modes on-screen to key in user names, passwords, speed dials, and search terms.

**CONTROL KEYPAD**

**Back** — Takes you to the previous screen in the VidyoRoom interface  
**Manage** — Brings up the remote control Help screen in the VidyoRoom interface  
**Delete** — Acts as a backspace when typing in a form field  
**Settings** — Brings up the Settings screen  
**Toggle** — There is no functionality for this key  
**A** — Multifunction key  
**B** — Multifunction key  
**C** — Multifunction key  
**D** — Multifunction key

## In Conference

**In Conference**

**DISCONNECT** — Ends meeting

**ARROWS / OK** — Left/Right — Pans camera (if supported by camera)  
Up/Down — Tilts camera (if supported by camera)  
Volume — Adjusts the sound level  
Mute — Mutes your microphone or recording source  
Selfview — Cycles through Selfview modes  
Single Screen Mode — Picture-in-picture, docked, full screen and off  
Dual Screen Mode — Picture-in-picture, docked and off  
Zoom — Zooms your camera In/Out (if supported by camera)  
1-8 — Sets the number of participants viewed  
0 — Sets the number of participants back to auto

**CONTROL KEYPAD**

**Manage** — Brings up the remote control Help screen  
**Home** — Resets Camera Pan, Tilt, and Zoom to default position (if supported by camera)  
**Privacy** — Toggles Privacy mode, so that no one in the conference can see your video  
**Share** — Toggles sharing on and off when using VGA/USB device. Press the "\*" button to view shared applications in full screen.  
**Toggle** — Cycles through shared sources, including none  
**A** — Swaps displays when using Dual Screen mode  
**B** — Enables DTMF dialing mode [P2P calls only]  
**C** — Toggles Far End Camera Control mode  
**D** — Toggles between preferred/non-preferred mode



## Getting Started

### What's in This Box:

#### VidyoRoom HD-50 Accessory Kit

- VidyoRoom Remote Control
- Batteries, AAA (2)
- Cord, Power, US, 6ft [1.82m] (1)
- Cord, Power, UK, 6ft [1.82m] (1)
- Cord, Power, Europe, 6ft [1.82m] (1)
- Cable, Ethernet, 6ft [1.82m] (1)
- Cable, HDMI/DVI, 6ft [1.82m] (2)
- External IR USB Adapter and Cable
- Adapter, HDMI/DVI (2)
- Adapter, DVI/VGA (1)
- HD-50 Getting Started Guide

### Optional Purchase Components:

#### Camera

- Logitech HD Pro Webcam C910 (Preferred)
- Logitech Quickcam Orbit AF

#### SpeakerPhone Options


- ClearOne Chat 150
- ClearOne Chat 50

#### Screen Share Adapter Kit

- Vidyo VGA2USB Capture Unit (1)




## The VidyoRoom Hardware

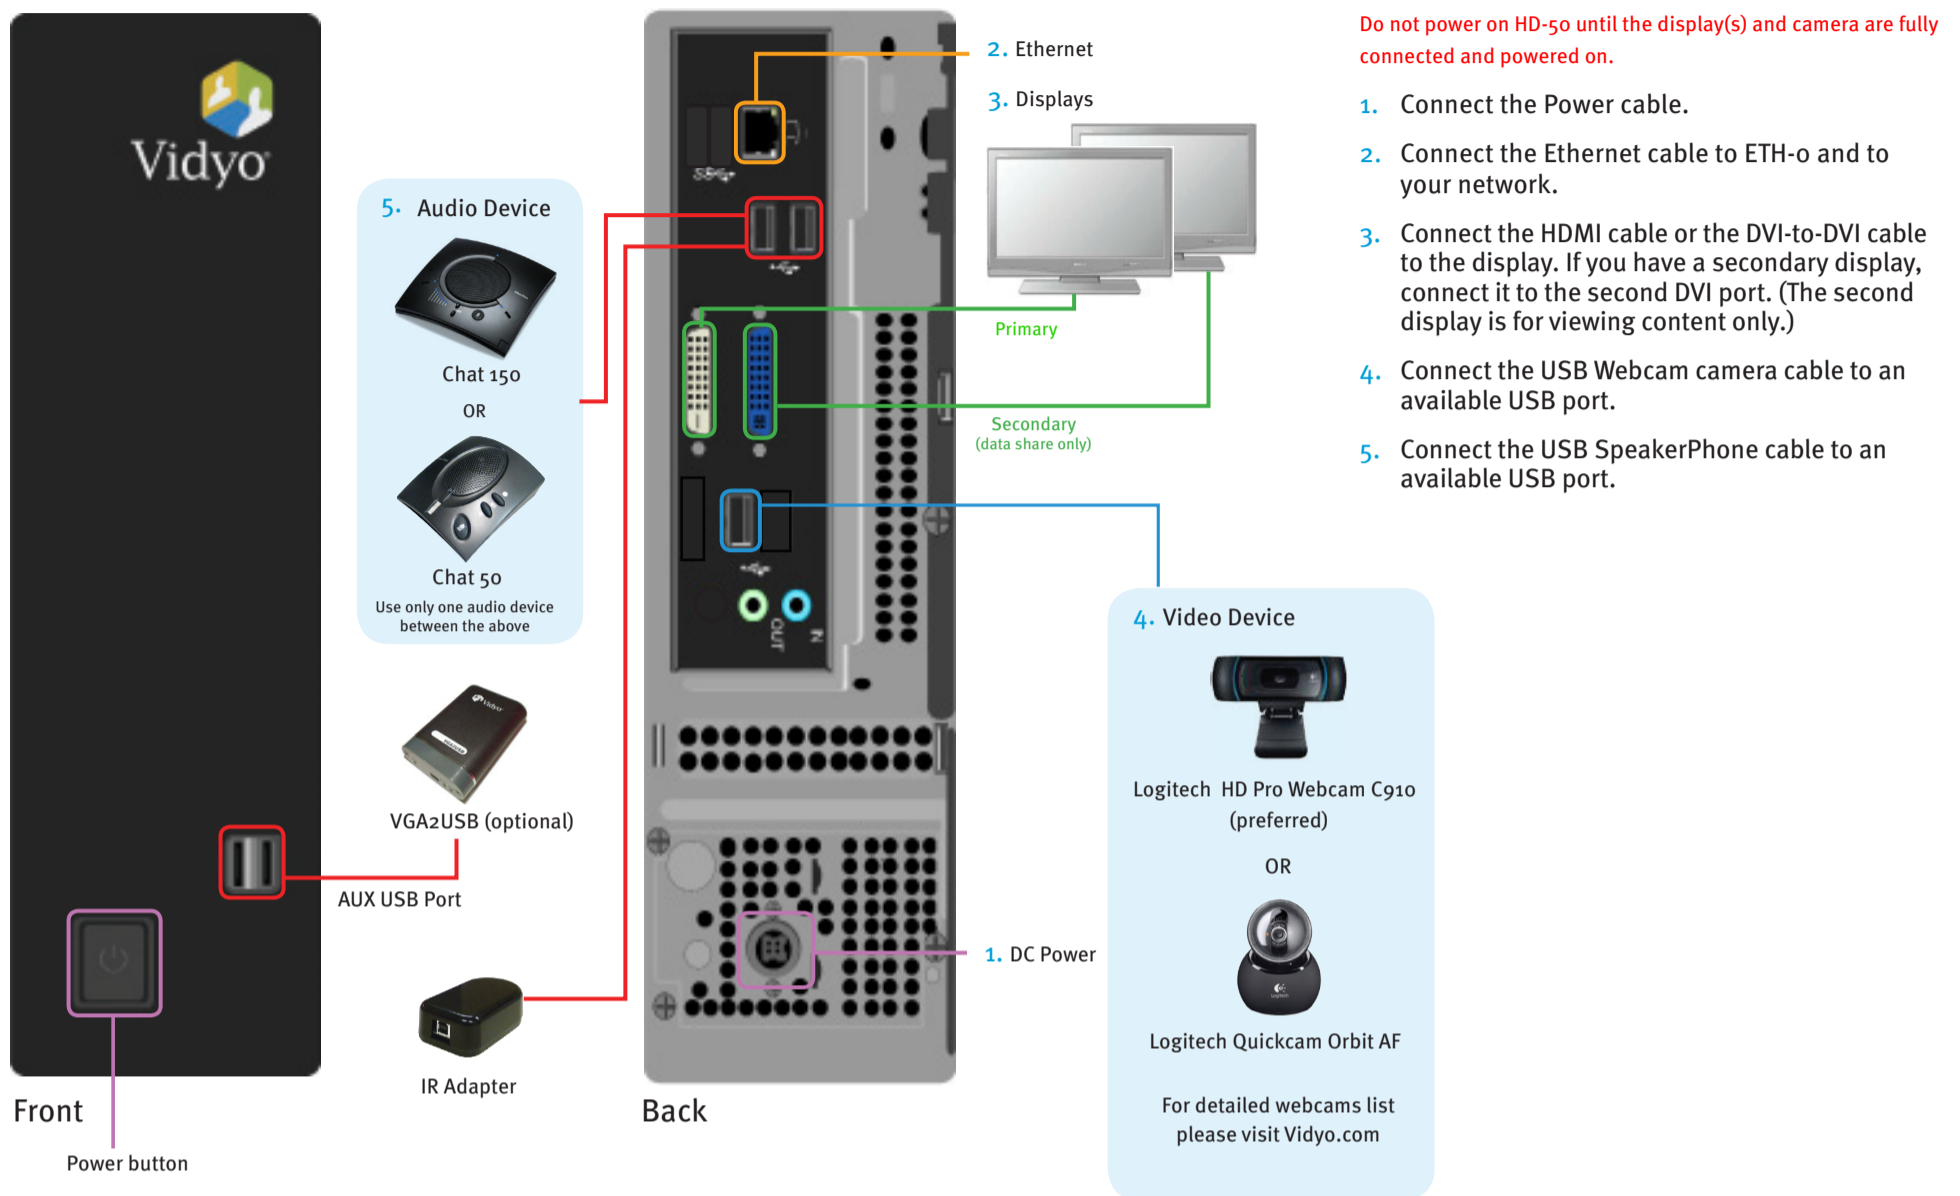


## Start Up Screens\*

When the system boots up, you'll see the Account screen, and you must do the following:

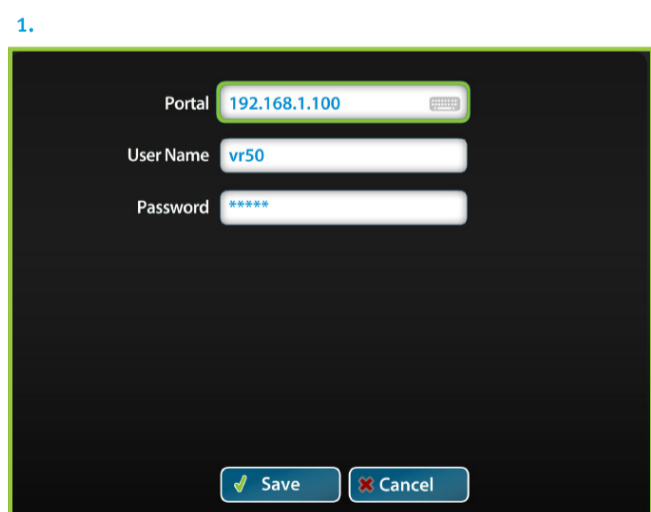


1.
  - Enter Portal – Arrow right, click **OK** and use the onscreen keyboard to enter the IP address of the VidyoPortal that the VidyoRoom is connected to.
  - Enter User Name – Arrow down to the User Name field, click **OK** and use the onscreen keyboard to enter the name of the VidyoPortal.
  - Enter Password – Arrow down to the Password field, click **OK** and use the onscreen keyboard to enter the password of the VidyoPortal.
  - Scroll down to the **Save** button and click **OK** to save your settings.

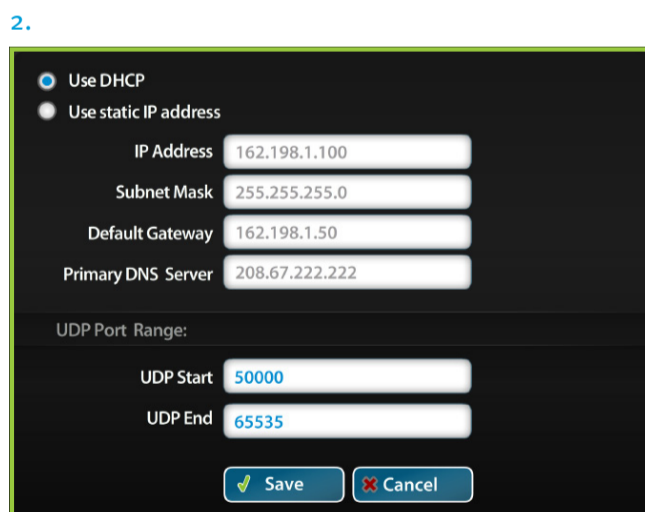

2.
  - To change network settings for your VidyoRoom, click Network to access the Network screen. (The default setting on this screen is **Use DHCP**.)
  - Click **Use static IP address**, and then specify the network settings using the onscreen keyboard to enter the appropriate information.
  - Scroll down to the **Save** button and click **OK** to save your settings.

### Using the Onscreen Keyboard

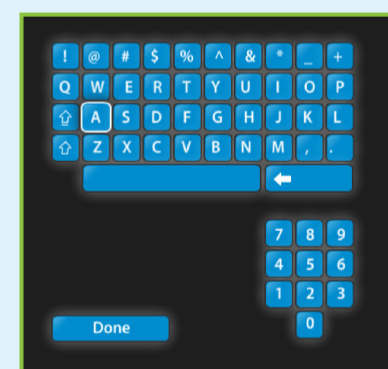

- In a field, click **OK** to view the keyboard.
- Use the up, down, left, and right arrow keys to navigate.
- Click **OK** to enter a character.
- Click **Done** to close the onscreen keyboard.

\* See the separate *VidyoRoom Administrator and User Guide* for more details.