

VidyoRoom™ HD-40 Revision B

Getting Started Guide



What's Included

Your HD-40 Revision B shipped with the HD-40 Revision B codec and the following items:

VidyoRoom HD-40 Revision B		
<ul style="list-style-type: none"> Power adapter and power cables for the United States, Europe, and Ireland/United Kingdom – total length 11ft (3.35 m) 	<ul style="list-style-type: none"> VESA mount bracket and hardware Mini DisplayPort to HDMI adapter HDMI to HDMI Cable – 3 ft (1.82 m), Qty. 1 	<ul style="list-style-type: none"> Ethernet cable, Cat5E – 7 ft (2.13 m) Infrared remote control with 2 AAA batteries External infrared receiver with USB cable – 6 ft (1.828 m)


Depending on your order, you may receive one of the following Pro Pack Accessory Kits or the DVI to USB adapter:

Pro Pack Accessory Kit Part Number: PKG-ACC-RM-PRO	Pro Pack Accessory Kit (Basic) Part Number: PKG-ACC-RM-BASIC For use with your HDMI or DVI connected cameras (sold separately)	DVI to USB3 Adapter Part Number: DEV-ACC-RM-DXT-D2U3 For simply adding high frame rate shares and projection capabilities
<ul style="list-style-type: none"> VISCA to serial cable, EVI control – 6 ft (1.82 m) Serial to USB adapter – 1 ft (.30 m) DVI to USB 3.0 adapter – includes 3 ft. (.91 m) USB 3.0 cable USB hub Sony EVI-HD7 and Phoenix Quattro 3 	<ul style="list-style-type: none"> VISCA to serial cable, EVI control – 6 ft (1.82 m) Serial to USB adapter – 1 ft (.30 m) DVI to USB 3.0 adapter – includes 3 ft. (.91 m) USB 3.0 cable USB hub 	<ul style="list-style-type: none"> DVI to USB 3.0 adapter – includes 3 ft. (.91 m) USB 3.0 cable


Separate diagrams in this guide show connections for both the Logitech CC3000e and Sony EVI-HD7V cameras with the Phoenix Quattro3 speakerphone. Additional peripherals sold separately. To view a list of peripherals compatible with VidyoRoom, go to <http://www.vidyo.com/support/peripherals>.

Logitech CC3000e	Sony EVI-HD7	Phoenix Quattro3
<ul style="list-style-type: none"> Camera, Speakerphone, Remote Control, and Powered Hub Wall or table camera mount Speakerphone to hub cable – 16 in (40.6 cm), USB cable and Remote control Adhesive (for mounting hub) and Power adapter 	<ul style="list-style-type: none"> Camera Power adapter and power cables for United States, Ireland and United Kingdom, and Europe – 6 ft (1.82 m) DVI to DVI Cable – 15 ft (4.57 m) Remote control 	<ul style="list-style-type: none"> Quattro3 unit USB A to USB Mini B cable Ethernet Cable

Installing Your HD-40 Revision B with a USB-Connected Camera (Logitech CC3000e Pictured)

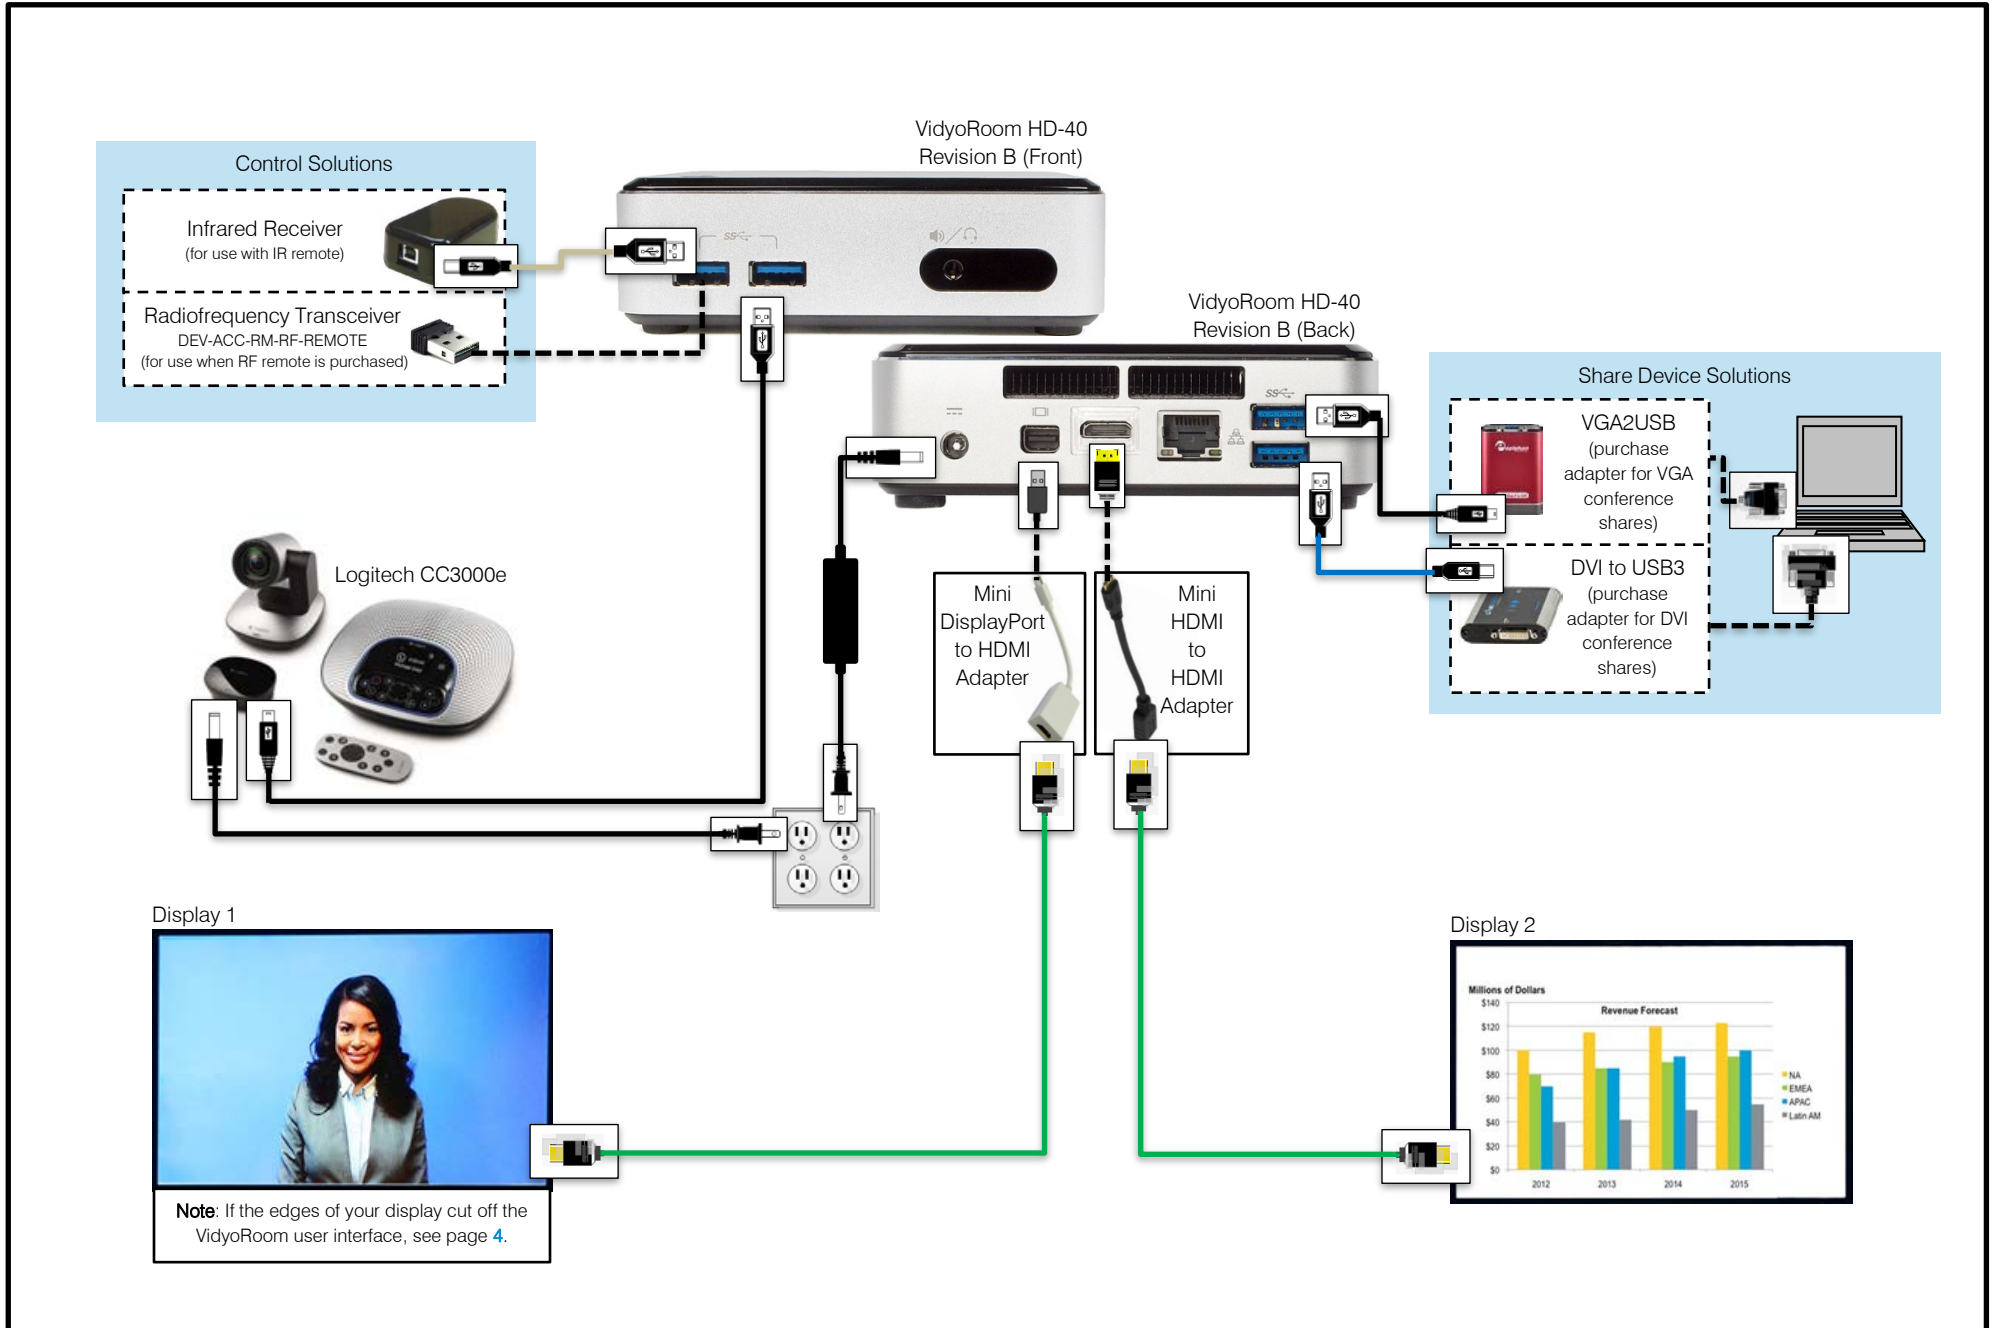


Installing Your HD-40 Revision B with a DVI or HDMI-Connected Camera (Sony EVI-HD7V Pictured)

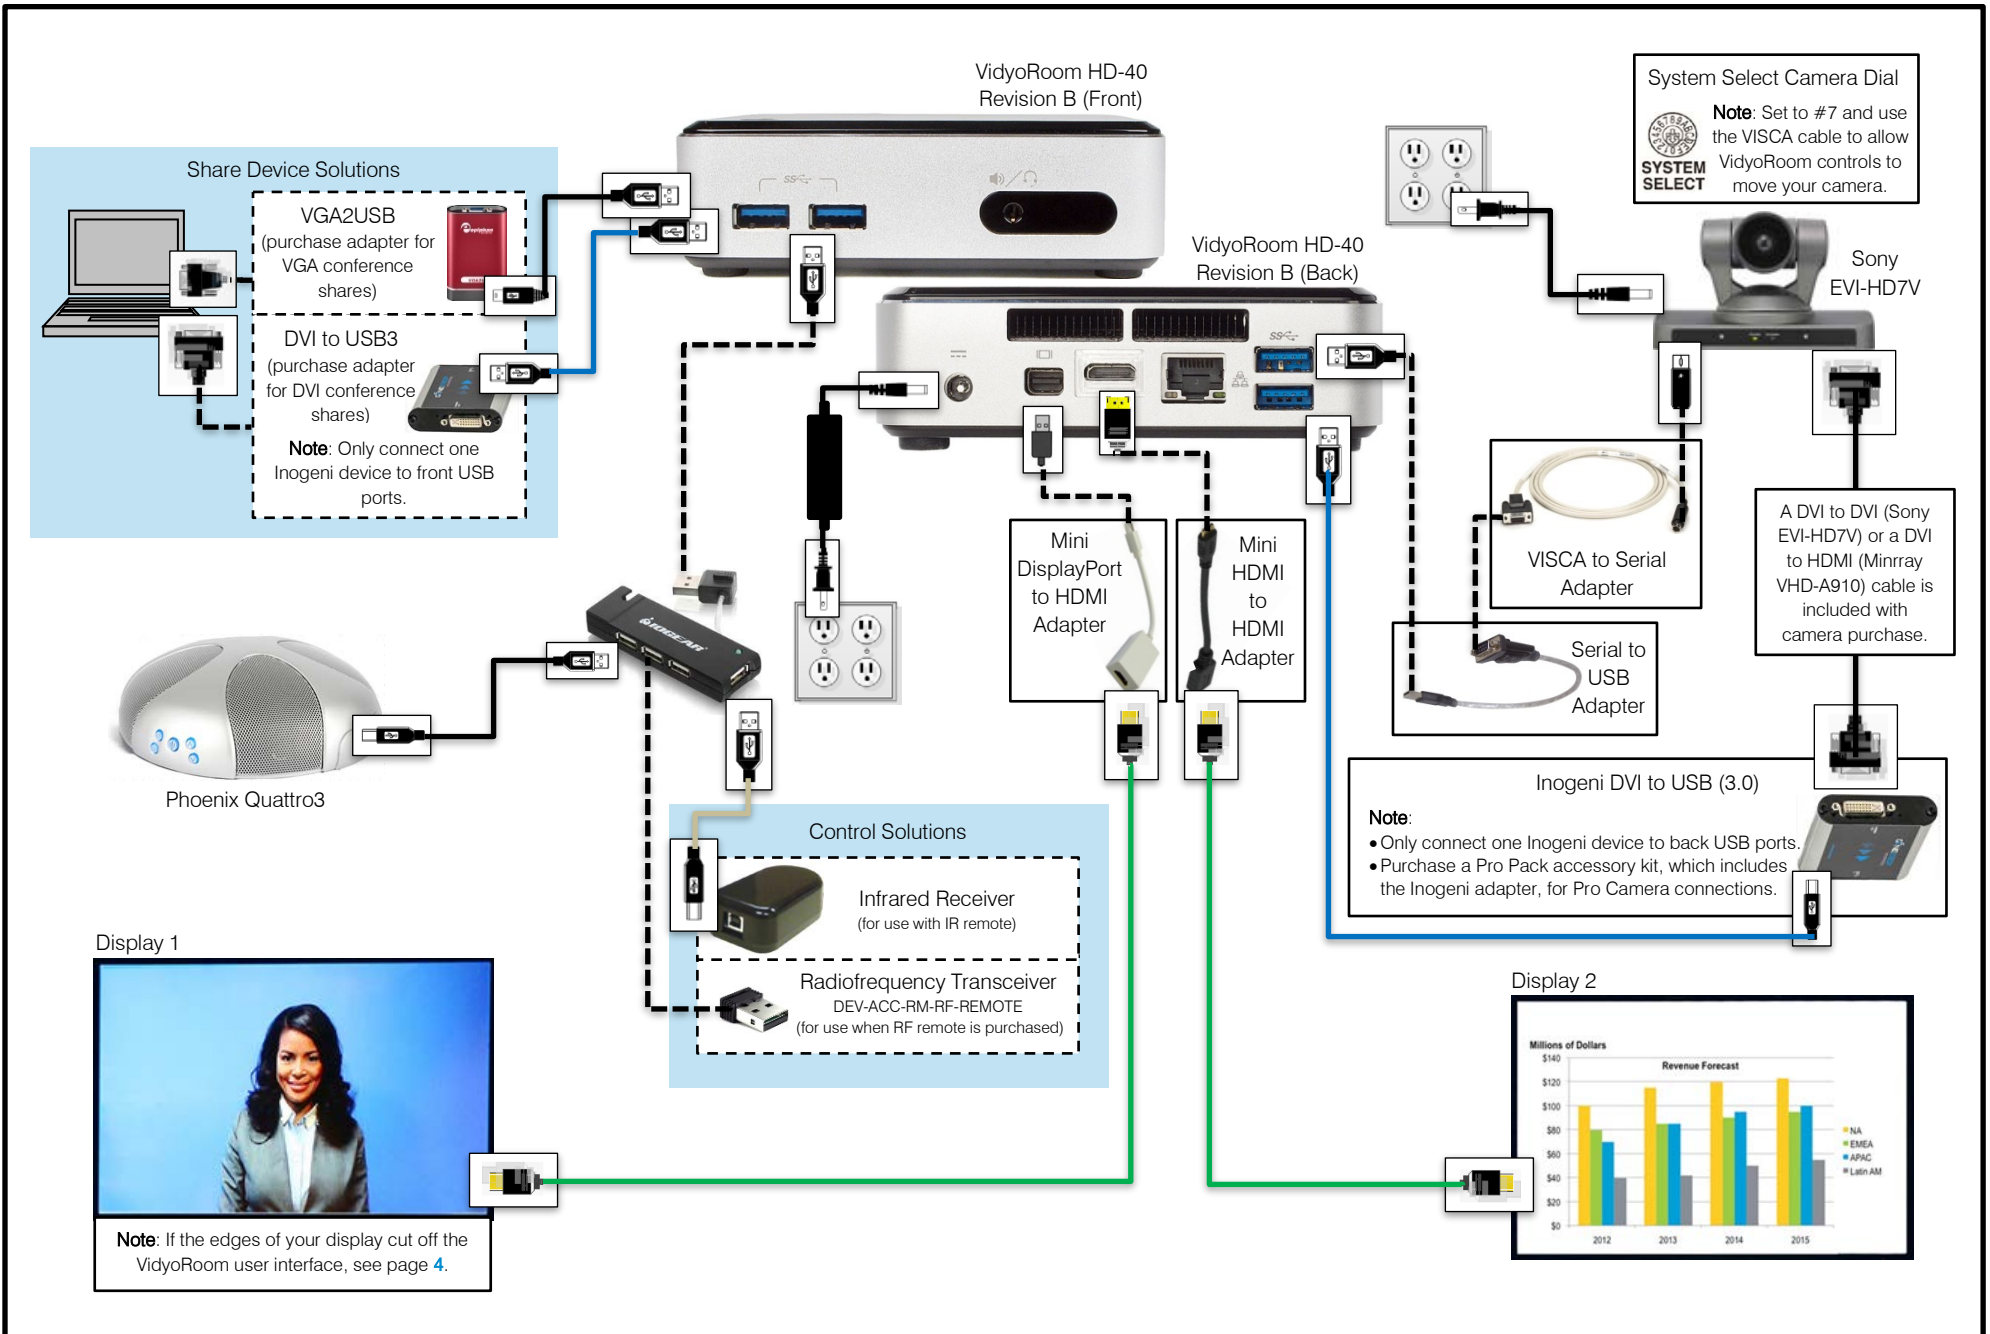

Configuring Supported Television Picture Settings

If the edges of your display cut off your VidyoRoom UI, your screen may resemble the following screenshot:

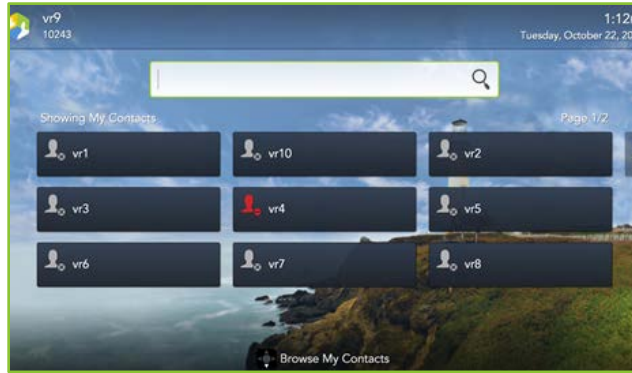

The following table describes how to configure supported television picture settings in order to properly align the user interface:

LG	Samsung	Sharp	Sony	Vizio
<ol style="list-style-type: none"> 1. Press Menu on your TV remote. 2. Select Picture > Picture Options. 3. Select Just Scan. 	<ol style="list-style-type: none"> 1. Press P. Size on your TV remote. 2. Select Screen Fit. 	<ol style="list-style-type: none"> 1. Press Menu on your TV remote. 2. Select Picture > Advanced Settings. 3. Turn OverScan Off. 	<ol style="list-style-type: none"> 1. Press Wide on your TV remote. 2. Select Wide Mode > Full. 	<ol style="list-style-type: none"> 1. Press Display on your TV remote. 2. Select Normal.


For more information, refer to the documentation provided with your television.

Configuring the Account and Network Settings

To configure the VidyoPortal™ account settings:

1. When the VidyoRoom powers up, press the **Settings** button on the remote control.

The Account screen displays the default IP address of your VidyoPortal as well as the default user name and password that came with your VidyoRoom. You must change these as described here.

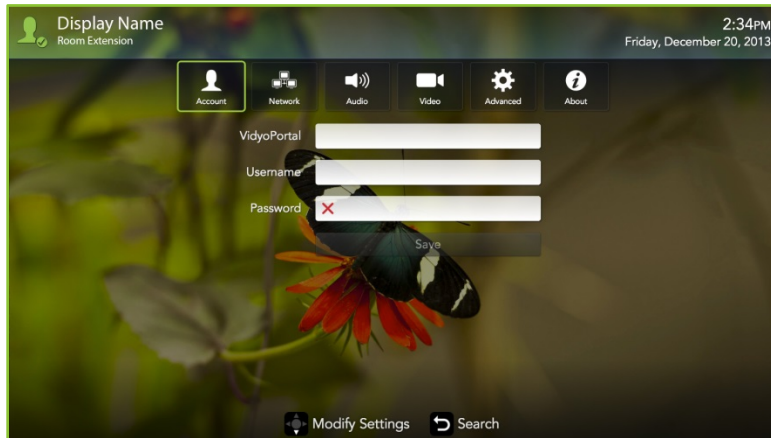

2. Navigate to the **Username** text box and use the Lucky Clover Keypad to enter the name of the VidyoPortal.
3. Navigate to the **Password** text box and use the Lucky Clover Keypad to enter the password for the VidyoPortal.
4. Navigate to the **VidyoPortal** text box and use the Lucky Clover Keypad to enter the IP address or URL of the VidyoPortal. (You don't have to enter "http://".)
5. Navigate to the **Save** button and press **OK** to save your settings.

To configure the network settings:

1. Use the arrow buttons to navigate to the **Network** tab and press **OK**. The Network screen appears:



Your VidyoRoom is set to **Use DHCP** by default. This enables it to automatically obtain its IP address.

2. If you want to change your VidyoRoom network settings, press the down arrow key to the DHCP field, then the right arrow key to turn DHCP **OFF**.
3. Navigate to each text box, enter the appropriate network setting.
4. Navigate to the **Save** button and press **OK** to save your settings.

For complete information about how to configure your VidyoRoom, refer to the *VidyoRoom and VidyoPanorama 600 Administrator Guide*. For complete information about how to use your VidyoRoom, refer to the *VidyoRoom and VidyoPanorama 600 Quick User Guide*.

- To obtain user documentation and access other helpful resources, go to <http://www.vidyo.com/services-support/technical-support/product-documentation> or register at selfservice.vidyo.com/register.
- To view a list of the various peripherals available with VidyoRoom, go to <http://www.vidyo.com/support/peripherals>.